

Astracast Kitchen Sink Installation Instructions

Prior to installation check that the sink is in perfect condition. Each sink is individually inspected at the final stage of packing, to ensure the standard of product quality and exactness of contents. In the unlikely event of any complaint, please contact your supplier before commencing any installation.

Step 1 - Preparing a Cut-Out in the countertop

- (a) Ensure that the countertop is level in all directions, and is positioned on the base unit.
- (b) Carefully lay the sink upside down on the countertop in the desired position, and check that the vertical walls of the bowl(s) are not likely to interface with the vertical walls of the base unit.
- (c) With the sink unit accurately positioned, lightly pencil the outline of the sink on to the countertop.
- (d) Remove the sink from the countertop and place safely in its original packing.
- (e) Draw a line 1/2" inside the sink outline.
- (f) Using a jig-saw, cut around the inside pencil line.
- (g) It is advisable to apply a chipboard sealer to the cut edges of the chipboard to protect them from moisture.
- (h) Remove all the pencil lines from the countertop.
- (i) If your sink is not pre-drilled for the faucet hole, with the sink upside down, drill out the hole using a 1 1/4" - 1 3/8" holesaw in either of the pre-scored faucet hole locations.

Step 2 - Installing the sink in the countertop

- (j) Lay the sink upside down on the countertop.
- (k) Apply silicone sealant around underside perimeter of sink edge.
- (l) Place the sink unit into the countertop cut-out, ensuring that it is centered.
- (m) Re-check the positioning of the sink unit in the countertop, and correct if necessary.
- (n) Checking the alignment of each clip assembly, tighten each screw lightly.
- (o) Finally, tighten the screws in the sequence as shown in figure 1.

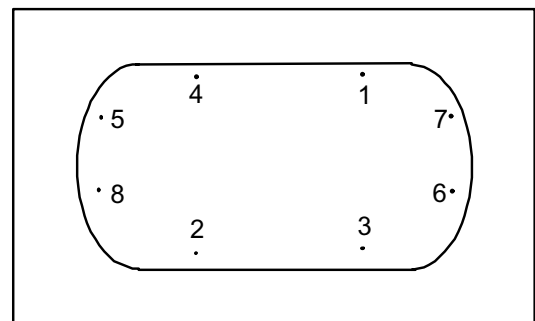


Figure 1

A Request To The Installer

Please leave the care leaflet from the sink unit packing with the householder.